

How do I reset my RCD?

To reset an RCD, you can follow these steps:

1. Turn off all devices connected to the affected circuit and switch off the main power supply.
2. Locate the RCD in your consumer unit and push the test button; this should cause the RCD to trip.
3. If the lever on an RCD is in the DOWN position, it is off. To reset it, the lever simply needs to be pushed back UP. For some RCDs, it is necessary to push the lever fully downwards before it will let you push it back UP and reset. In many cases, this will be fine.
4. If your RCD does not stay up (on) please remove all plugged in items (remove them, don't just switch them off)
5. Then plug them in 1 by 1 until the RCD trips again. Remove item and reset RCD.
6. This is the faulty item or please call 01952 971 777 if you require further help.

